

HELKAMA

FE-SARJA GEOMETRIA

| FE-SARJA | | | | | | | | |
|----------|------|------|------|------|------|------|----------------|------|
| | FE10 | | | FE11 | | | FE11 jousto | |
| FS | 16 | 19 | 21 | 15 | 17 | 20 | 17 | 20 |
| ST | 406 | 483 | 533 | 381 | 432 | 508 | 432 | 508 |
| TT | 605 | 615 | 625 | 666 | 676 | 685 | 676 | 685 |
| HT | 125 | 135 | 145 | 135 | 135 | 135 | 135 | 145 |
| HTA | 69 | 69 | 69 | 69 | 69 | 69 | 69 | 69 |
| STA | 73 | 73 | 73 | 73 | 73 | 73 | 73 | 73 |
| CS | 495 | 495 | 495 | 495 | 495 | 495 | 495 | 495 |
| BD | 67 | 67 | 67 | 67 | 67 | 67 | 67 | 67 |
| FO | 479 | 479 | 479 | 479 | 479 | 479 | 511 | 511 |
| S | 615 | 624 | 633 | 624 | 624 | 624 | 624 | 624 |
| R | 417 | 424 | 431 | 475 | 485 | 495 | 485 | 495 |
| WB | 1166 | 1176 | 1187 | 1227 | 1237 | 1247 | 1237 | 1247 |

FS = runkokoko
ST = istuinputken pituus
TT = efektiivinen vaakaputki
HT = emäputken pituus
HTA = ohjauskulma
STA = istuinkulma
CS = takahaarukan pituus
BD = keskiölinja
FO = etuhaarukan pituus
S = stack
R = reach
WB = akseliväli

